


DYNA-PRO®

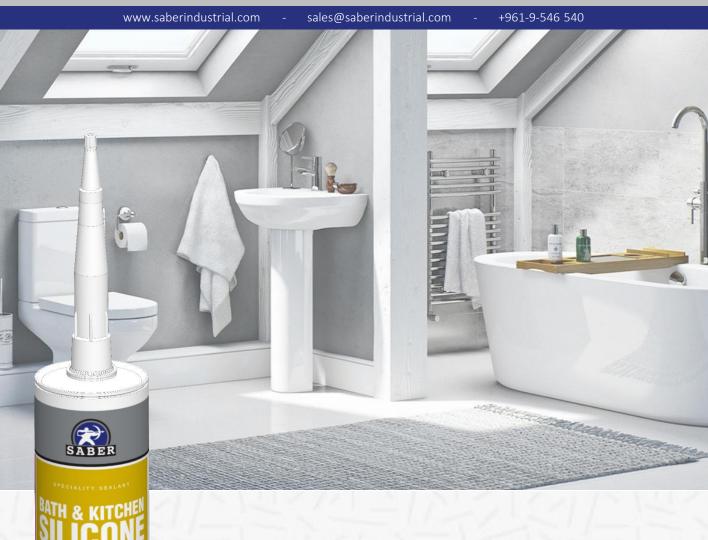

SANITARY SILICONE

Superior interior/exterior one-part medium modulus moisture curing silicone sealant. **DYNA-PRO® Sanitary** is fungus and mildew resistant and therefore especially suitable in sanitary applications and where mildew resistance is required. It exhibits excellent resistance to aging, shrinkage, moisture, cracking and discoloring. It is free of solvents.

Approvals









BATH & KITCHEN SEALANT

SABER

BATH & KITCHEI SEALANT

CLEAR SILICONE





www.saberindustrial.com

sales@saberindustrial.com

+961-9-546 540

Features

- · Fungus and mildew resistant
- 100% silicone polymer
- Excellent elasticity
- Solvent-free
- Excellent resistance to shrinkage, cracking and discoloring
- Resistant to aging, ultra-violet radiation and temperature extremes









Surface Preparation

Surfaces must be clean, dry and free from grease, dust and frost. In case of renovation work, old sealant as well as old paint must be removed completely. Surface should be cleaned with a suitable solvent for the substrate such DYNA-PRO® Silicone Cleaner, isopropanol etc.

Instructions

This sealant is ready to use. After suitable joint preparation and masking using Dyna-Pro® All-purpose masking tape, the sealant is gunned into place and tooled within 5 minutes, using a spatula dipped in soapy water. Masking tape is then removed immediately. If necessary, clean uncured material using an approved sealant remover or other suitable solvent. For removal of cured sealant, abrasion or other mechanical means may be needed.

Do not expose the sealant to water for at least 24 hours.











Designed & Manufactured According to AFAQ ISO 9001:2015 Certified Quality Management System

Technical Data

Property	Unit	Value
Skin over time	Min	15
Extrusion rate 20°C 6.2Kg/cm2	g/min	223
Durometer Shore A, 3d/RT	5	24
Tensile 3d/RT	MPa	>= 1.55
Elongation 3d/RT	%	460

Priming

This product features adhesion to a variety of non-porous substrates; however, for specific substrates, priming may be necessary to improve adhesion. Please consult our Technical Service Department.

Shelf Life

14 months from date of production, when stored at or below 30°C in the original unopened container

Packaging

Standard Colors

- 280 / 300 mL cartridge
- 85 g tube



The information is offered in good faith and is believed to be accurate. It should not however be used in substitution for customer's tests to ensure that DYNA-PRO® products are safe, effective and compatible for the intended use. Sole warranty is that the product will meet the DYNA-PRO® sales specifications in effect at the time of delivery. Your exclusive remedy for breach of such warranty is limited to refund of purchase price or replacement of any product shown to be other than as warranted.